


WorldPenScan Go

User Manual

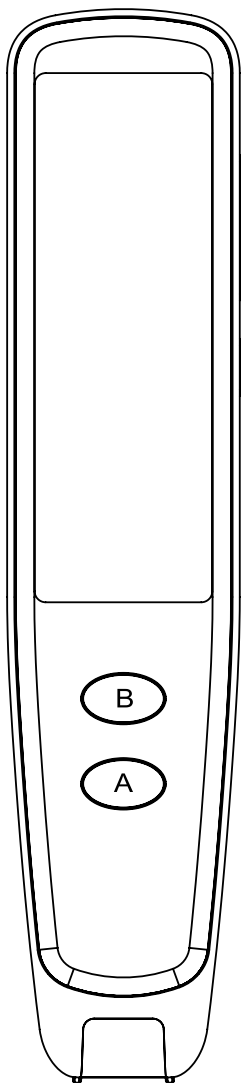

This manual contains important information, please keep it for future use.

WorldPenScan Go Tutorial

English

To know how to get started, please scan the QR code below, or access the URL.

Français

Pour savoir comment commencer, veuillez numériser le code QR ci-dessous ou accéder à l'URL.

Deutsch

Um zu erfahren, wie Sie loslegen können, scannen Sie bitte den unten stehenden QR-Code oder rufen Sie die URL auf.

Italiano

Per sapere come iniziare, scansiona il codice QR di seguito o accedi all'URL.

Español

Para saber cómo empezar, escanee el código QR a continuación o acceda a la URL.

<https://d.penpower.net/wpsgoe>



1. Product Description

WorldPenScan Go is a portable scanning translation pen that is easy to carry.

This is an intelligent product that integrates scanning, OCR (text recognition), sentence translation, voice translation and reading aloud technologies.



After connecting to the Internet, it allows you to chat in multilingual conversations.

⦿ Package Contents

- Pen scanner x1
- Type-C USB cable x1
- Quick guide and warranty card x1

⦿ Product Specifications

- Product Name: WorldPenScan Go
- Screen: 2.98 inches (resolution 800*268)
- Capacity: 8GB
- WiFi: 2.4GHz
- Lens: 0.3 mega pixels
- Use environment: 0° C-45° C
- Product size: 146.5* 31.6* 14.3 mm
- Speaker: 8 ohm 1 watt single speaker
- Transmission and charging cable: USB Type-C
- Battery: 1050mAh rechargeable lithium polymer battery
- Earphone: Bluetooth earphones and USB Type-C earphones can be supported. (May not be compatible with a very few models of USB Type-C earphones)

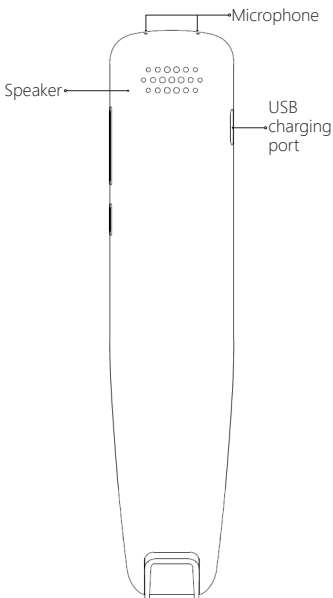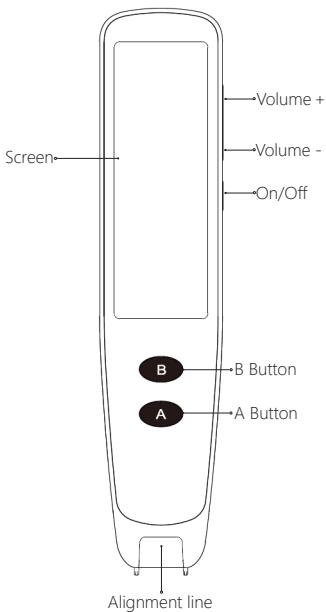

2. Function Introduction

◎ Power On/Off

Long press the 【On/Off】 button for about 3 seconds.

◎ WiFi Connection

Go to 【Settings】 and turn the 【WiFi switch】 ON, then choose a usable WiFi to connect. After connecting WiFi, there will be the WiFi icon at the top right corner.

When using this product outdoors, you can choose to use the mobile hotspot for WiFi connection.


Note: This product only supports WiFi connection for transmission and does not support Bluetooth connection for transmission.

◎ How to Scan

Hold the pen, aim the alignment line on the pen tip to the middle of the text, gently press down the pen tip to let the light bright up, then drag the pen to the right at a steady and constant speed, and lift the pen at the end of the text to finish scanning.



Note: Please tilt the pen tip slightly to let it touches the paper surface.

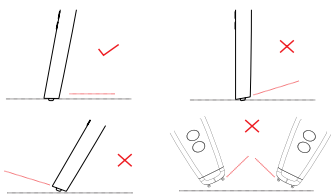

◎ Dictionary Lookup

Tap the **【Dictionary Lookup】** icon to enter and scan a text on the book.

After scanning, tap a word to check the dictionary contents.

Swipe from the right side of the screen to the left to pull out the menu to enter advanced settings, you can select the recognition language and the translation language, and set the read-out speed, or edit the scanned contents.

Tap **【Speaker】** icon to read out, tap **【Star】** icon to add the word into **【Bookmarks】**.

◎ Instant Translation

Tap **【Instant Translation】** icon to enter and scan sentences on the book, then the translations will show up.

Tap the sentences to read out, and swipe from the right side of the screen to pull out the menus and set up functional habits, such as the recognition language, the translation language, and also read-out settings.

◎ **Text Capture**

Tap **【Text Capture】** icon to enter.

Create a file then you can start to scan the document.

After scanning, you can edit the file name or delete the file.

◎ **Live Translation**

After connecting to the WiFi network, tap **【Live Translation】** icon to enter this feature.

Set the languages you are going to use, then press and hold the A or B button corresponding to your languages and start speaking.

After you release the button, you can directly translate it into the other language and read it aloud.

◎ **Voice-to-Text**

Tap **【Voice-to-Text】** icon to enter. Create a file, tap the **【Microphone】** icon to start recording, then tap the icon again to stop.

During the recording process, the system will do dictation. Select the language to be recognized at the bottom left before recording.

◎ **ScanNote**


This product can be used on iOS/Android smartphones and Windows/Mac computers, paired with the exclusive web app (ScanNote).


It offers features such as Text capture, Immersive reader mode, Instant translation, and Dictionary lookup, etc. Users can operate the functions based on their needs.


- iOS / Android Smartphones**

After setting up the WiFi network connection for WorldPenScan Go, tap 【ScanNote】 icon to enter. Scan the QR code on the pen scanner with your smartphone's camera to open the web app (ScanNote). After the connection is completed, you can proceed with text scanning.
- Windows / Mac Computers**


After setting up the WiFi network connection for WorldPenScan Go, tap 【ScanNote】 icon to enter. Follow the instruction to open the web app (ScanNote) (URL : <https://wps.evolaclass.com>) on a desktop browser. Enter the pen scanner ID on the web app and click 【Connect】 to complete connection, and then you can proceed with text scanning.
- ScanNote function introduction**


Text capture : Click the  (Text capture) button for using the 【Text capture】 function and start scanning texts to extract the content.


Note: If you need to directly scan text to MS Word /Outlook and other application software, please click the  (download software) button to download and install an exclusive desktop software (Windows/Mac). Once the installment and connection are completed as instructed, you could start scanning directly to MS Word.

Immersive reader mode : Click the  (Immersive reader mode) button for using the 【Immersive reader mode】 function, which provides

functions such as automatic read-aloud following, line focus, reading mode setting, and full-screen display to enhance your concentration and comprehension while reading.

Note: On a smartphone, please tap  (More) to navigate to **【 Immersive reader mode 】** function.

Instant translation : Click the  (Instant translation) button, you can scan the entire sentence or a paragraph to get the translation.

Dictionary lookup : Click the  (Dictionary lookup) button, you can scan the word to look up the definition of the word after selecting the dictionary you want to use.

- For more detailed information about ScanNote's features, please scan the QR code below, or access the URL:

<https://d.penpower.net/wpsgofaq>



© Device Connection

This product can be used with Windows/Mac computers and iOS/Android devices, you can directly scan text to the above platform devices.

Windows / Mac

Access the link below to download and install the software:

<https://d.penpower.net/wpsgo>

- Mac users can also search for **【WorldPenScan Go】** in the App Store to download.
- Make sure your computer is connected to the same local area network/ WiFi network or mobile hotspot as the pen scanner does.
- On the pen scanner, tap **【App Connect】** icon on to enter, then open the software on the computer, and follow the instructions on the screen to connect.
- After the connection is established, place the mouse cursor on the document or webpage where text can be input, and select the text language to be scanned on the software toolbar to start scanning, then the scanned texts will appear on the document for you to do more further actions.
- Moreover, you can extend the **【Scan To Buffer】** area by clicking the arrow at the toolbar bottom, and scan texts into it for translation or dictionary lookup.
- If you want to access the files stored in the pen scanner, please click the "folder" icon on the toolbar, then select the files to download them to your computer.

iOS / Android


Scan the QR code below, or search for **【WorldPenScan Go】** in App Store / Google Play to download and install.



- Make sure your phone is connected to the same local area network/ WiFi network or mobile hotspot as the pen scanner does.
- On the pen scanner, tap 【App Connect】 icon on to enter, then open the app, click 【Connect】 at the top right of the screen, select 【WorldPenScan Go】 model, and the app will start to detect and connect.
- After the connection is established, you can start to scan, then the scanned texts will appear on the app for you to edit/ share, and in the translate mode, you can even tap on a word to do dictionary lookup.
- Moreover, you can access the files stored in the pen scanner from the app and download them.

Ⓢ USB Charging

When the system prompts that the battery is low, please charge it in time. It takes 2-3 hours to charge the pen.

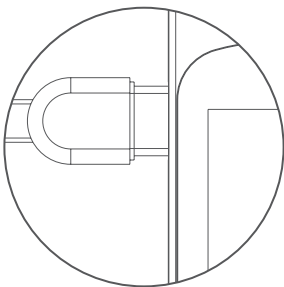

Only use the charging cable provided in the package for charging. In the event that the included cable is lost, ensure that the pen scanner is charged using a power adapter compliant with DC 5V--2A specifications (USB Type-A to USB Type-C).

Note: Please note that newer charging cables (USB Type-C to USB Type-C) are not compatible and cannot be used!

⊙ Volume Adjustment

Press 【Volume+】 / 【Volume -】 buttons to adjust the volume.

⊙ Force Shutdown

Long press the 【On/Off】 button for at least 10 seconds, the system will force shutdown, then you can turn the device on again after then.

⊙ Software Update

Tap 【Settings】 icon, find the 【Software Update】 , and tap the 【Check for updates】 button to check for new software version.

If there is a new version released, then tap 【Download Update】 button to download and update the new software.

(Note: Before the system update, make sure that the pen scanner has sufficient power (more than 50%, and the USB cable is connected to keep charging), please do not do any operation during the system installation to avoid system installation interruption and upgrade failure, and lead to the pen cannot be used normally!)

3. Usage Notice

◎ Safety

- This product is strictly prohibited from being exposed to direct sunlight or extreme environments such as high temperature and heat.
- This product is not a toy. It is not suitable for children under 4 years old to use alone. Children should use this product with their parents.
- Do not soak this product and its accessories in liquid.
- Before using the charger, you must check whether the wires, plugs, shells and other parts are damaged. If damage is found, stop using it until the repair is complete.
- This product can only be used with the recommended power supply (recommended power supply specification: 5V-2A), and the power supply that compliance with certification specifications and meets the standard requirements should be used.
- Built-in 1050mAh lithium polymer battery cannot be removed or replaced. If damaged, please contact after-sales service and repair it.
- The charger is used by or under adult supervision.
- For the safety of you and your children, we have made charging protection and cannot be used while charging.

Cautions

1. Non-professionals are not allowed to replace the battery. If the battery

is replaced incorrectly, there will be a safety hazard.

2. Only use the same type or equivalent type of battery to replace.

3. For your safety, please do not expose the battery in the product to overheating environments such as the sun or fire.

© Troubleshooting

Error	Solution
Boot failed	Charge the pen
Computer can't detect the pen	Use the specific USB cable
Won't read out after scanning	Turn off the mute function in the Dictionary Lookup
No Live traslation	Please connect to a WiFi network
Touch screen doesn't respond	Long press the power button for 10 seconds to force shutdown and boot again
No scan results	Scan with the correct pen holding posture
Others	Contact customer service

For more detailed answers to frequently asked questions, please scan the QR code below, or access the URL:

<https://d.penpower.net/wpsgofaq>

